

Owner's Manual Guide for the Chest Freezer & Conservator with Sliding Glass

Before using the Appliance:

- Make sure that the place where you install the Appliance is dry, well ventilated and not exposed to direct sunlight
- Adjust the leveling of the Appliance using the leveling screws to be perfectly horizontal
- Keep a distance of minimum 15 cm between the Appliance and the surrounding walls or other appliances
- Ensure that Voltage and Frequency indicated on the name plate, usually at the rear of the appliance, correspond to the Voltage and of your electricity supply.
- It is important not to plug the Appliance to electricity before 4 hours from arrival to the house
- It is recommended to wait for another 4 hours after plugging the Appliance before placing the food

Front Control Panel: (Not available in the conservator)

The Chest Freezer you own has a front panel with colored lamps for ease of use and fast indication of the inner status

- Directly after plugging the Chest Freezer to electricity the Green lamp will be turned on
- If the Red lamp is turned on, it means that the inside temperature still did not reach the desired adjustment
- If the Orange lamp is turned on, it means that the Super Freezing function is in process
- To control the inside temperature, adjust the Thermostat between the position MIN & MED
- If fast freezing is required, push on the Super Freezing button (It is very important not to leave the Chest Freezer on the Super position for long time)

Ice Defrosting:

- To reduce the formation of ice inside the cabinet, be sure to pack well the food and minimize the opening of the Appliance door
- It is advisable to defrost the ice twice per year
- Do not use an electric heater to assist defrosting
- While defrosting, remove the drain cover and place a plastic vessel all the time under the drainage hole
- When defrost is completed, clean and dry the interior. Reload the food inside the compartment and run the appliance on Super-Freezing mode for 4 hours.

General Recommendations:

- The best temperature for food storage for long periods is -18°C
- Avoid placing hot food in the Appliance
- Avoid frequent opening of the Appliance door
- Avoid freezing glass bottles and soft drinks
- If the Appliance is not to be used for a long time, it is recommended to switch it off and leave the lid open
- Before cleaning, always unplug the Appliance. Do not use caustic or abrasive agents or soap for cleaning
- The compressor and the condenser should be freed of dust once a year with a brush or vacuum cleaner
- Do not cover the Appliance
- Avoid placing heavy material on the glass door
- Direct sun light will severely affect the performance of the conservator. It is strongly recommended to place the appliance in the shade.

Warning: *“Keep the key out of reach of children and not in the vicinity of the appliance”*